


SF Asennusohje  
S Installation instruktioner  
N Installationsinstruktioner  
DK Installationsinstruktus  
NL Installatievoorschrift  
D Montageanweisung  
F Instructions d'installation  
ES Instrucciones de montaje  
I Istruzioni di montaggio


## ML6425A,B/ML7425A,B

### Electric Linear Valve Actuator


#### INSTALLATION INSTRUCTIONS

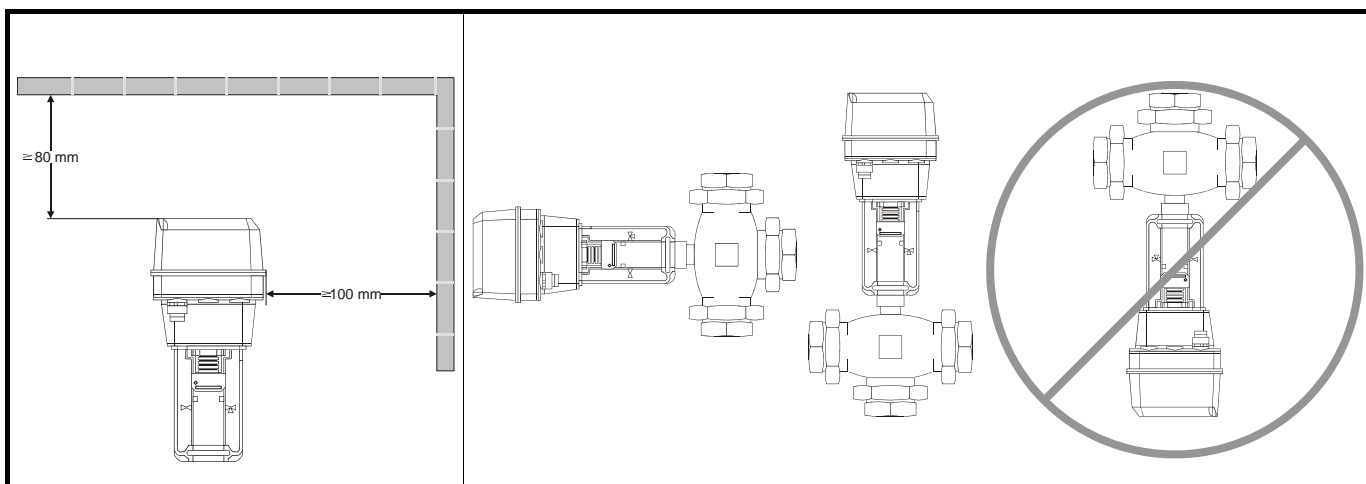


#### A1-A7: Installation

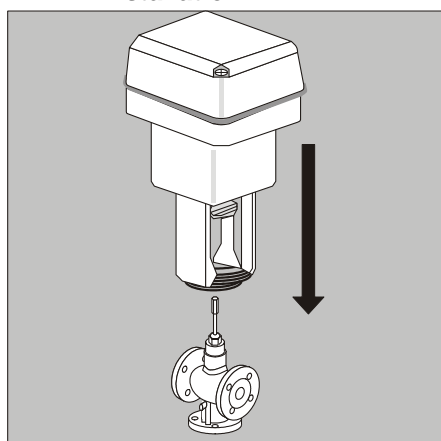


#### A1

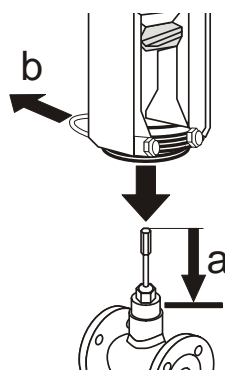


#### A2

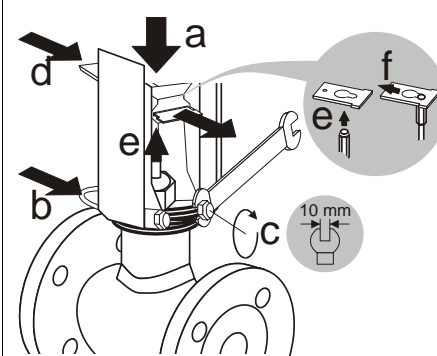


#### A3

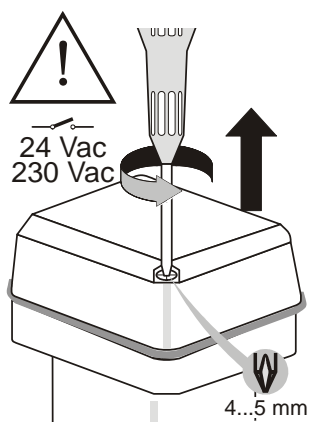



#### A4

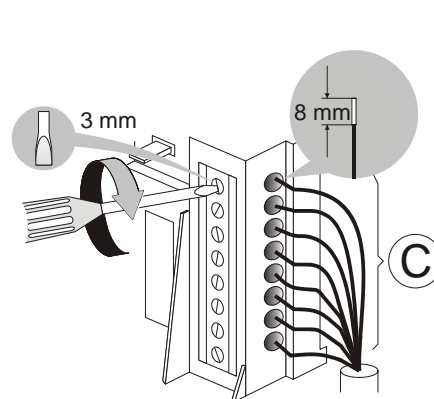

#### A5

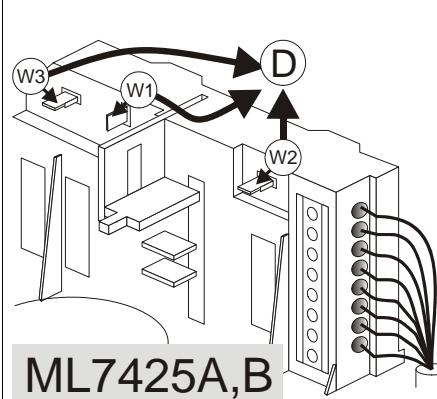

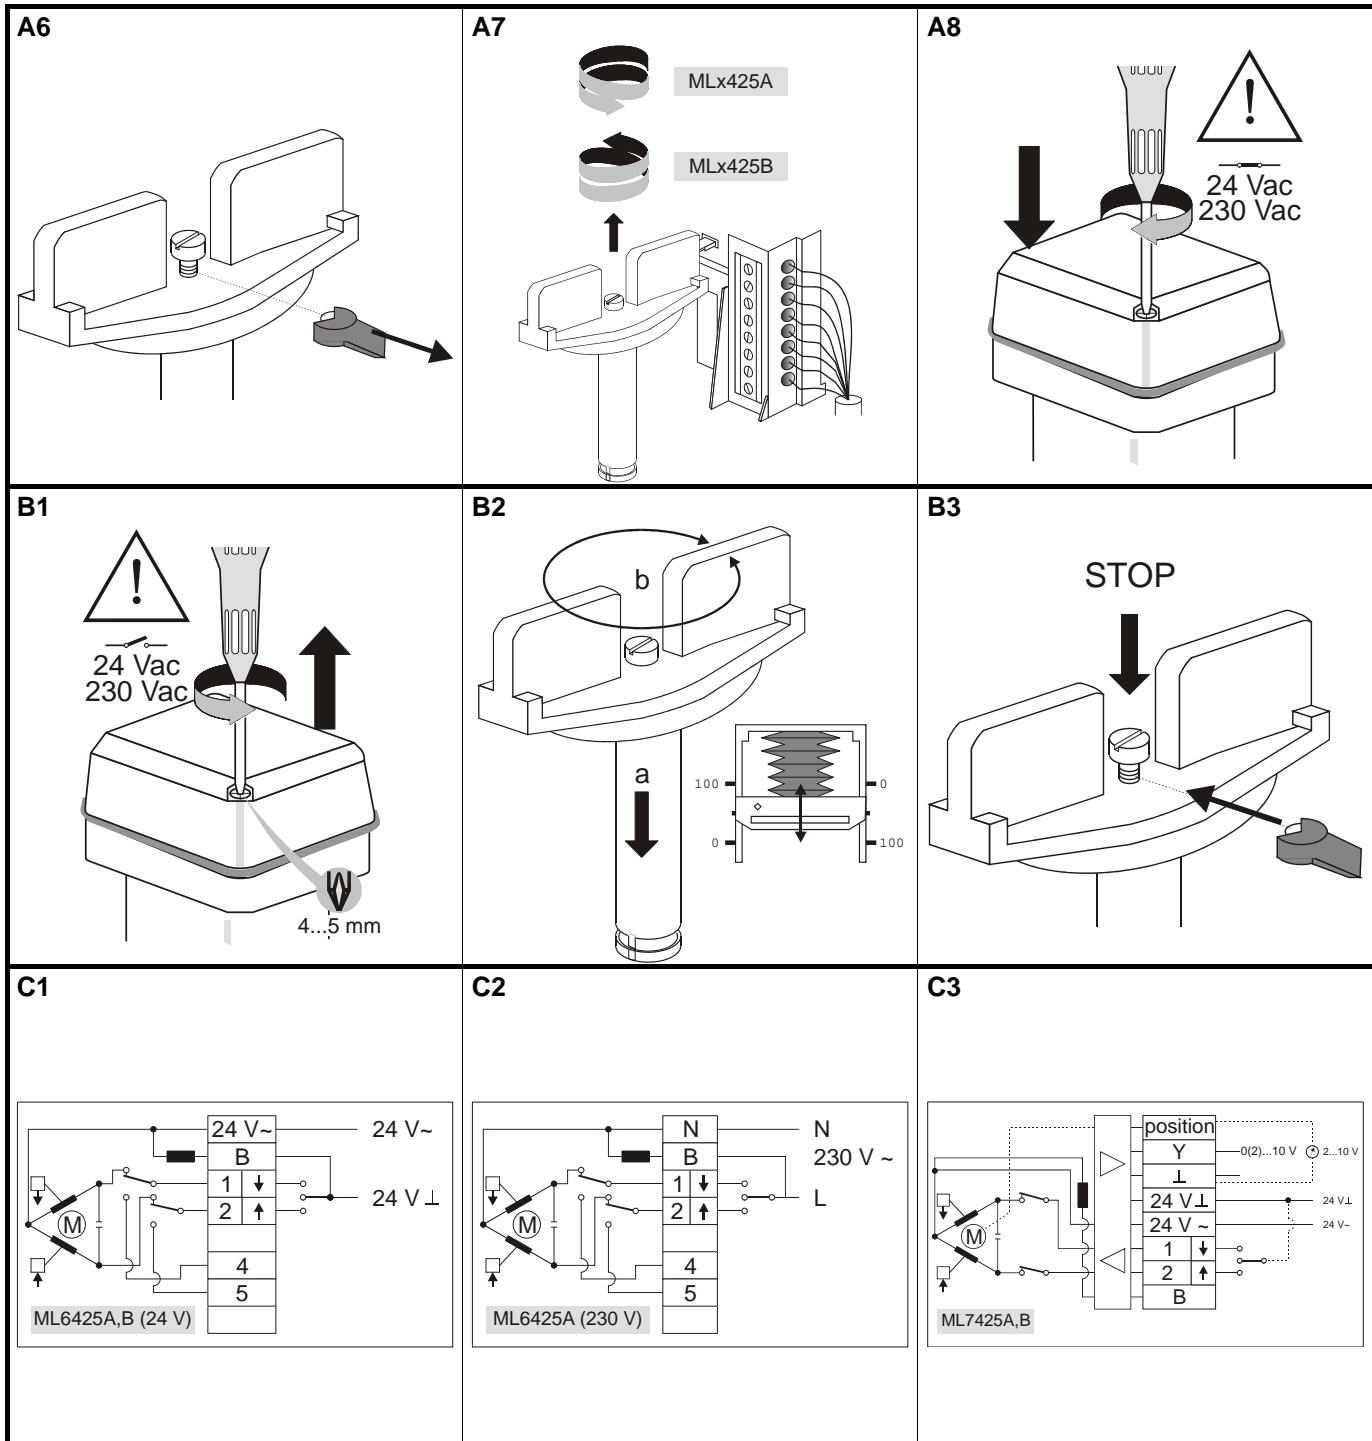

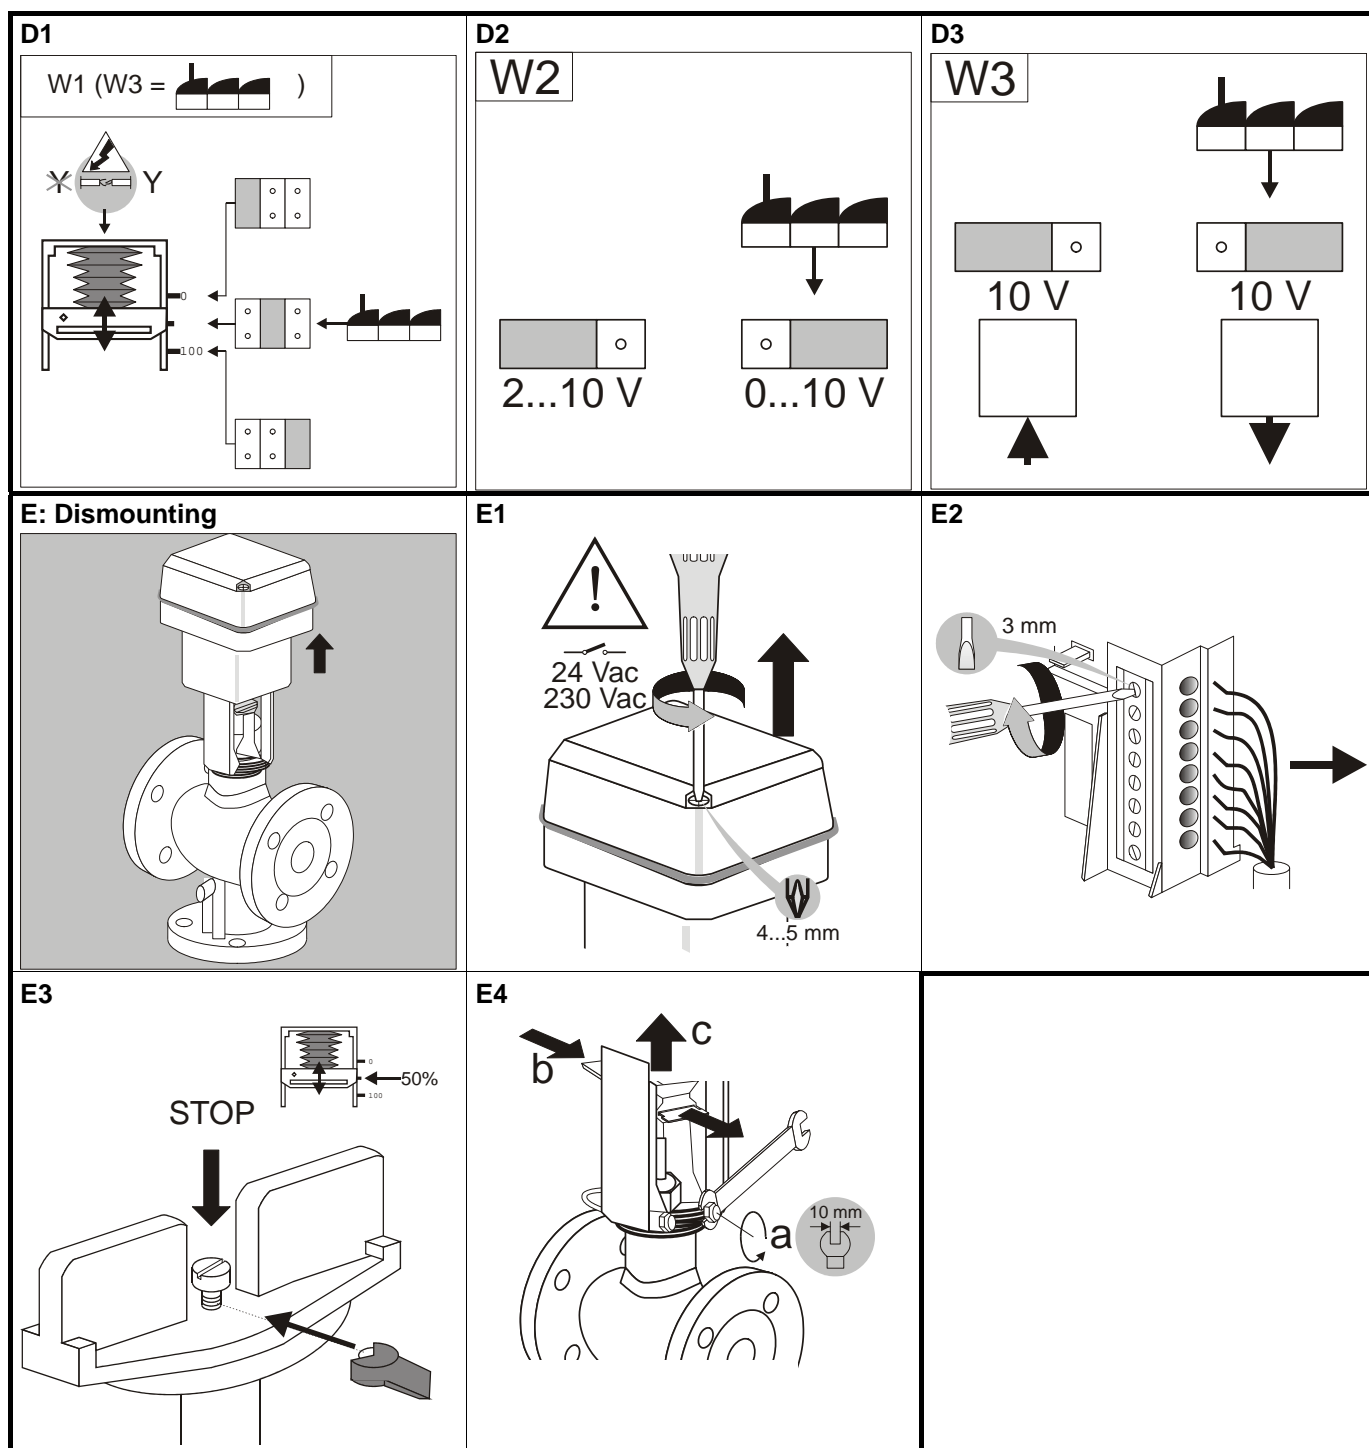

**Honeywell**

---

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sarl, Ecublens, Route du Bois 37, Switzerland by its Authorized Representative:

**Automation and Control Solutions**

Honeywell GmbH  
Böblinger Straße 17  
D-71101 Schönaich / Germany  
Phone: (49) 7031 637 - 01  
Fax: (49) 7031 637 - 493  
<http://europe.hbc.honeywell.com>

**DIN EN ISO**  
**9001/14001**

Subject to change without notice. Printed in Germany

MU1B-0235GE51 R1205B