

D Montageanweisung
F Instructions d'installation
I Istruzioni di montaggio
NL Installatievoorschrift
DK Installationsinstruktus
N Installationsinstruktioner
FIN Asennusohje
S Installation instruktioner
E Instrucciones de montaje

ML7420A6025

Electric Linear Valve Actuator

INSTALLATION INSTRUCTIONS

≥80 mm

≥100 mm

A1-A6: Installation

mounting

D Einbau
F montage
I montaggio
NL montage
DK montere
N monterings
FIN asentaminen
S montera
E montaje

A1

~108 mm

A2

a

b

a1

a2

a3

10 mm

c

A3

24 Vac

4...5 mm

A4

Y	0...10 V
⊥	
24 V⊥	24 V⊥
24 V~	24 V~

A5

W3

0 V


10 V

W3

10 V


0 V

A6

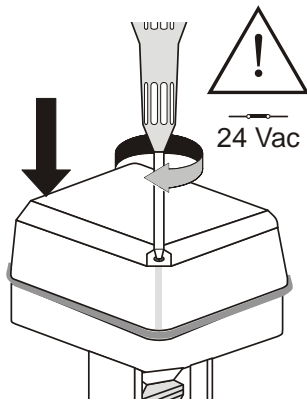


B: Dismounting

dismounting
D Ausbau
F démontage
I smontaggio
NL demontage
DK afmontere
N demontere
FIN purkaminen
S nedmontera
E desmontaje

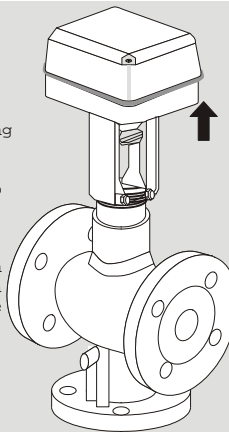

B1

A3→A4→A2→A1

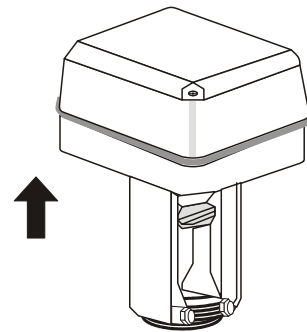

Automation and Control Solutions

Honeywell GmbH
Böblinger Straße 17
D-71101 Schönaich / Germany
Phone: (49) 7031 637 - 01
Fax: (49) 7031 637 - 493
<http://europe.hbc.honeywell.com>