


FI Asennusohje
S Installation instruktioner
N Installationsinstruktioner
DK Installationsinstruktus
NL Installatievoorschrift
D Montageanweisung
F Instructions d'installation
ES Instrucciones de montaje
I Istruzioni di montaggio


ML6421A,B/ML7421A,B

Elektryczny siłownik zaworów liniowych


INSTRUKCJA INSTALACJI

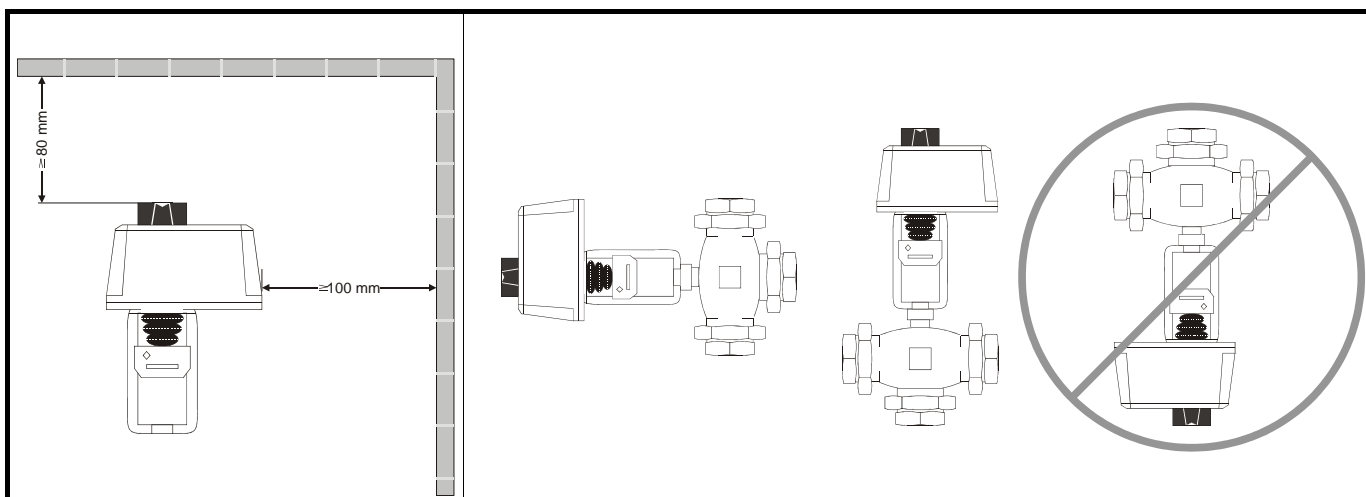


A1-A7: Montaz

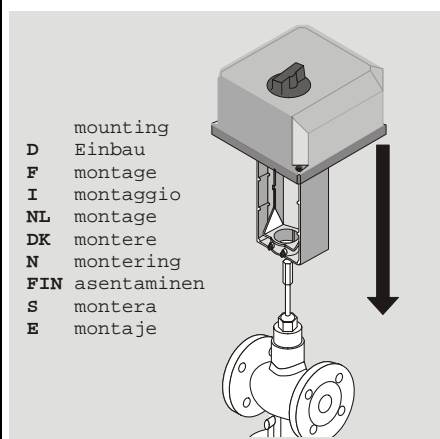


A1

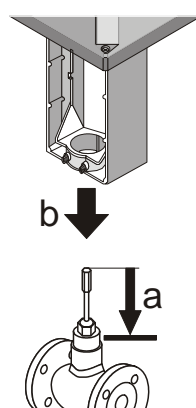


A2

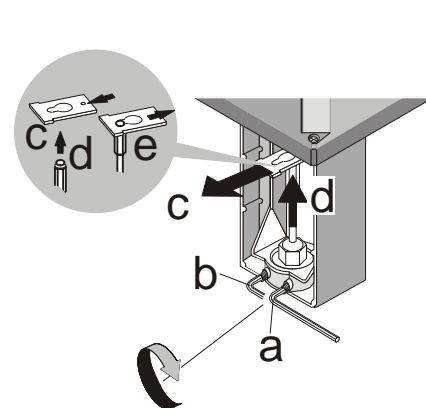


A3

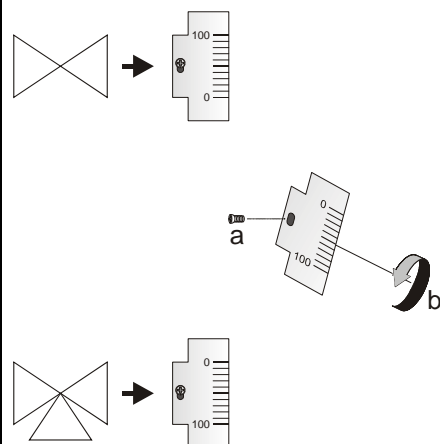


A4

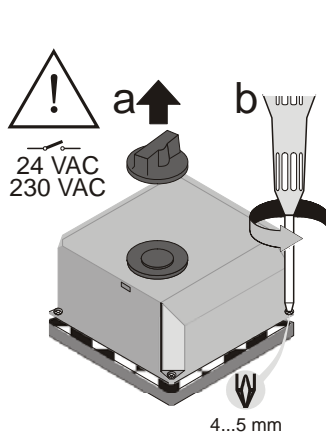


A5

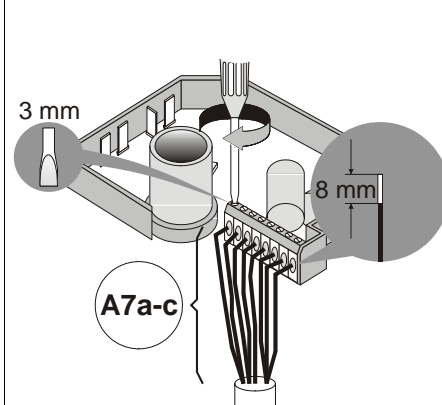


A6: ML7421A,B

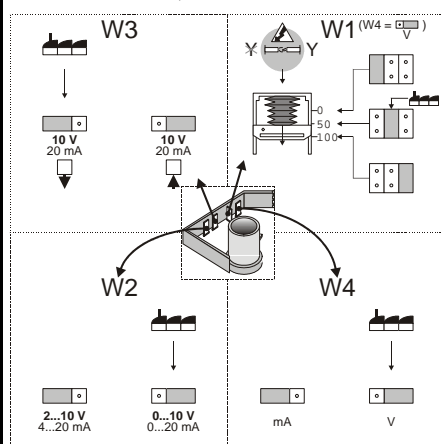


A7a: ML6421A (24 V)

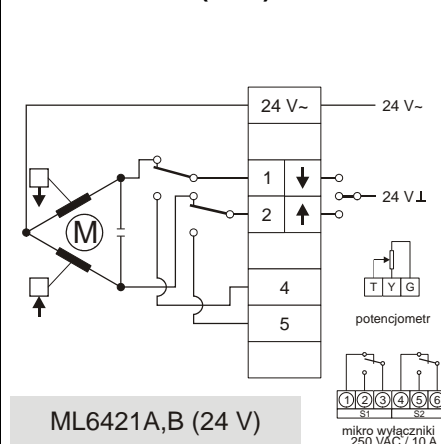


A7b: ML6421A (230 V)

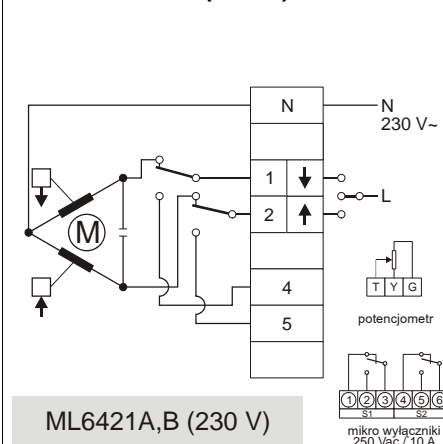


A7c: ML7421A

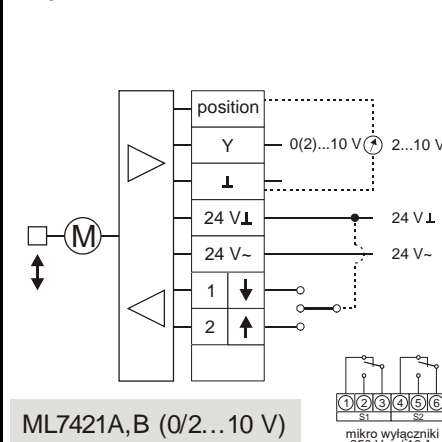


A8

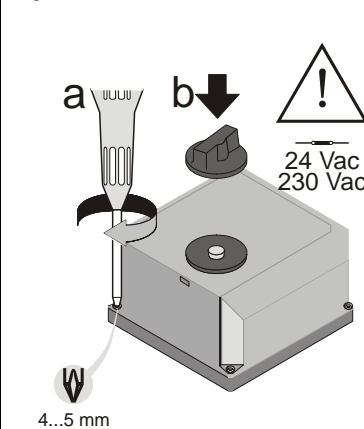


B: Ręcznie

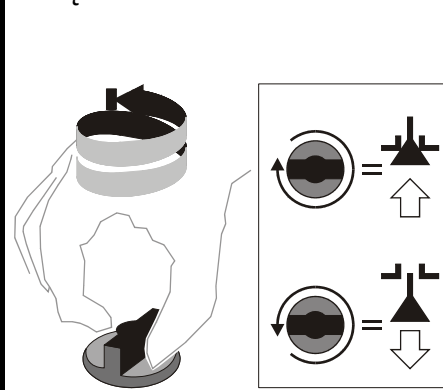

C: Demontaž

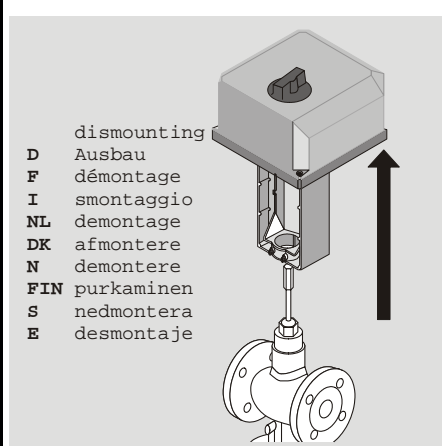

C1

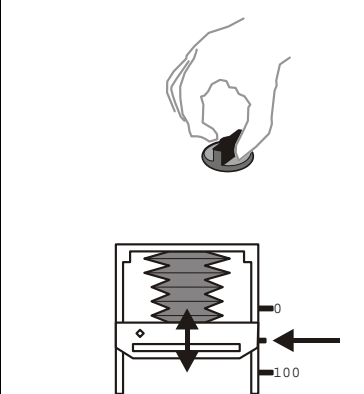

C2

